

To enter a programming session, follow the next few simple steps:

1) Press FEATURE * * 2 6 6 3 4 4

2) Enter Password: 2 6 6 3 4 4 or password that I set up

Display will read: " Terminals & Sets"

Using the navigation keys, as displayed below, follow the next simple steps:



3) Press: NEXT

Display will read: "Lines"

4) Press: Next

Display will read: "Services"

5) Press: Next

Display will read: "System Speed Dial"

6) Press: Show

Display will read: "Speed dial #:___"

Hint: Begin your System Speed Dials with "01"

Enter 01 or 02 or 03 etc.

Display will read: System Speed Dial #: 01

😊 Press: Show

Display will read: "No number stored"

7) Press the "CHANGE" softkey.

Display will read: "#01:

8) Enter the Speed Dial number

Press the "OK" softkey.

9) Press: NEXT

Display will read: "Use prime line"

10) Press: NEXT

Display will read: "Display digits:Y"

11) Press: NEXT

Display will read: "Bypass restr'n:N"

12) Press: NEXT

Speed dial 01 has now been programmed:

To program another Speed Dial Number, repeat steps 6 thru 14.